


CHAIN INSTALLATION

Cut chain to required length. Insert through chain guide eyelets and around sprocket and join ends. Chain loop should be untwisted on one side only (see illustration).

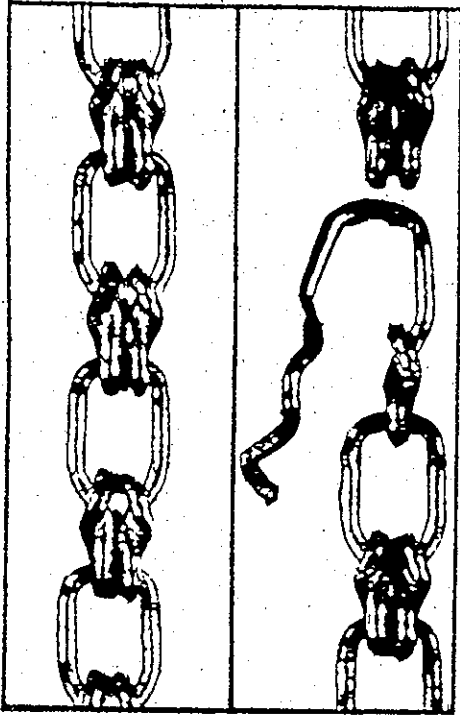

Chain loop should be untwisted on one side only (see illustration), and run through eye in the other end of chain and retwisted to original position.

Roto Hammer Industries, Inc.

P.O. Box 9308 • Tulsa, OK 74157
Tel: (918) 446-3500 • (800) 477-ROTO
Fax: (918) 446-6218